


**IMPORTANT NOTE :**  
 ENSURE ADEQUATE VENTILATION TO PERIMETER TRIM AND TOP OF DECK (GRATES, VENTS, GAPS IN TRIM)

CARE MUST BE TAKEN TO ENSURE THAT NO FIXINGS OR SHARP EDGES PENETRATE THE WEATHERTIGHT MEMBRANE DECK  
 ENSURE ALL SWARF CREATED DURING CONSTRUCTION IS REMOVED FROM THE MEMBRANE BEFORE COVERING WITH DECKING

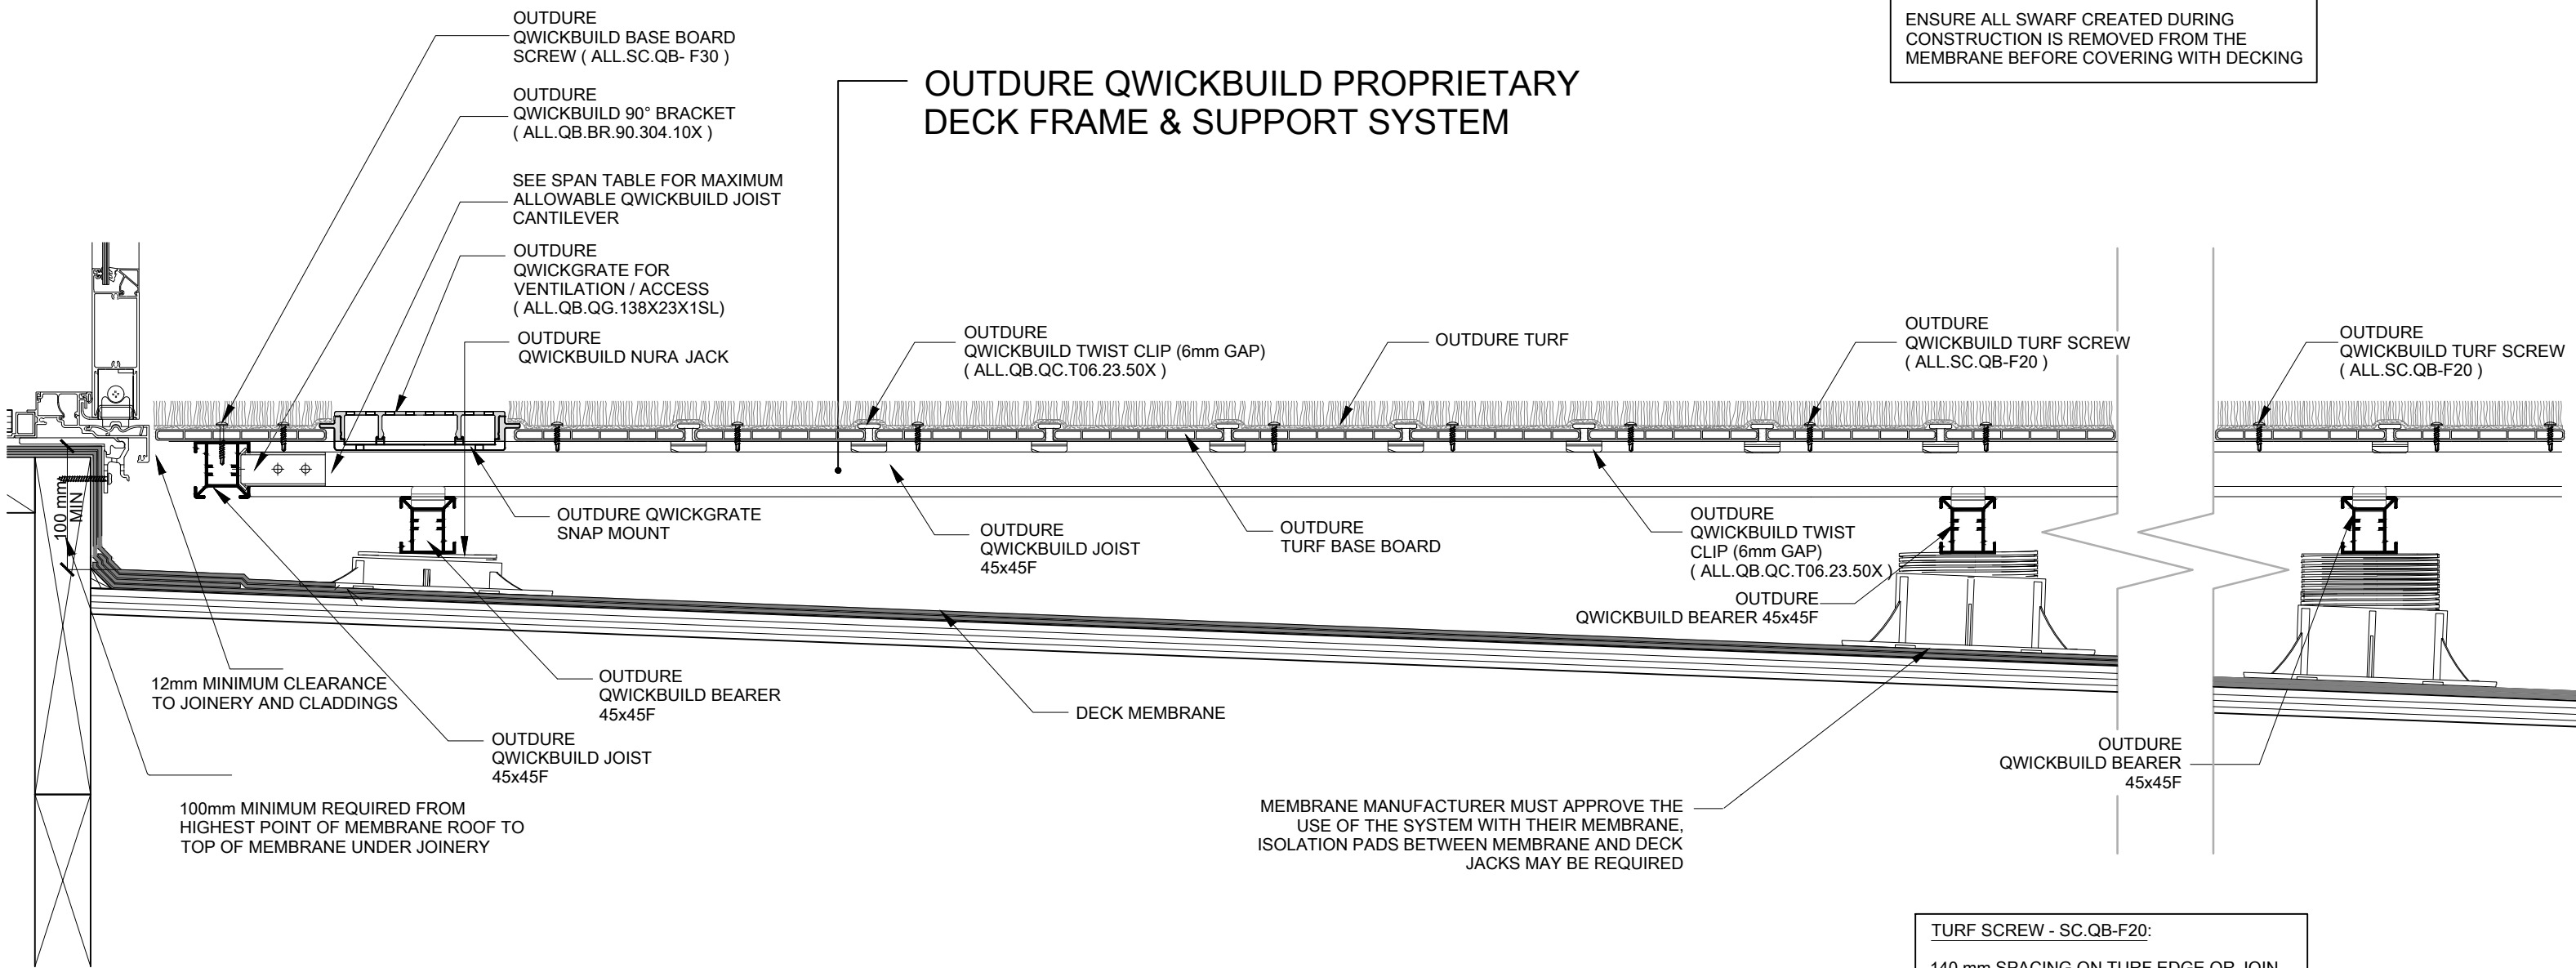

**1** QB - TU - 02 120mm LOW HEIGHT ELEVATION  
 SCALE 1:5

**TURF SCREW - SC.QB-F20:**  
 140 mm SPACING ON TURF EDGE OR JOIN

**BASE BOARD SCREW - SC.QB-F30:**  
 EACH BASE BOARD SCREWED WITH TWO SCREWS TO CENTRE JOIST.